

Technical Manual

Arc Lite

GOZNEY®

EU DOC-1042

Live-fire cooking made easy.

Introduction



DANGER

If you smell gas:

Shut gas off to the appliance.

Extinguish any open flame.

If odour continues, keep away from the appliance and immediately call your fire department.



WARNING

Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.

An LPG cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

This instruction manual contains important information necessary for the proper assembly and safe use of the appliance.

Read and follow all warnings and instructions before assembling and using the appliance. Keep this manual for future reference.

Never operate this appliance in enclosed areas. Failure to follow these instructions could result in fire or explosion which could cause property damage, personal injury or death.

Do not leave the appliance unattended.

Never operate this appliance within 1m/3.3ft of any structure, combustible material or other gas cylinder.

Never operate this appliance within 7.5m/24ft of any flammable liquid.

This appliance is not intended for commercial use.

Heated liquids remain at scalding temperatures long after cooking process. Never touch cooking appliance until liquids have cooled to 45°C/113°F or less.

If a fire should occur, keep away from the appliance and immediately call your fire department. Do not attempt to extinguish an oil or a grease fire with water.

This appliance must be kept away from flammable materials during use.

Use outdoors only.

Do not modify the appliance.

Contents -

GENERAL ADVICE	6
WARRANTY	7
PRODUCT OVERVIEW	8
GAS SPECIFICATION	9
1 OPERATION & INSTALLATION	11
SAFETY CONSIDERATIONS	12
FIRE	13
CARBON MONOXIDE	13
2 SETUP	15
INSTALLING THE STONES	16
INSTALLING THE BURNER GUARD	17
MOVING THE OVEN	18
OVEN PLACEMENT	19
3 FIRING UP GAS	22
CONNECTING TO GAS	23
GAS SAFETY	24
THE GAS HOSE	26
PUSH FIT REGULATOR	27
CLOCKWISE/ANTICLOCKWISE REGULATOR	27
TESTING FOR LEAKS	28
IGNITION	29
FIRST FIRING	30
FLAME CONTROL	31
TROUBLESHOOTING GAS BURNER	32
DISCONNECTING GAS	33
CLOCKWISE/ANTICLOCKWISE REGULATOR	33
PUSH FIT REGULATOR	34
4 GENERAL MAINTENANCE	36
CLEANING THE VENTURI	37
CLEANING THE OVEN	38
INTERNAL	38
EXTERNAL	39

GENERAL ADVICE

Arc Lite gets extremely hot and should not be used by children. Do not allow children near the device during or after operation. Arc Lite can stay hot for a few hours after use.

Do not use under any apartment or balcony or deck.

This appliance is for cooking purposes only. It must not be used for other purposes, for example heating a room.

Arc Lite is to be used outdoors only. Arc Lite shall not be used in a building, garage, or any other enclosed area.

Arc Lite shall not be used on a boat or within a recreational vehicle or any other form of confined area.

Assembly and operation of the oven should be carried out by a competent person.

The use of alcohol, prescription or non-prescription drugs may impair the consumers ability to assemble or operate the device safely.

Do not use any plastic or glass utensils within Arc Lite.

Use heat-resistant gloves when operating the oven.

Do not insert items into Arc Lite that are bigger than the dimensions of the oven mouth.

Do not over fill Arc Lite or cover the burner.

Do not operate Arc Lite in strong winds. Winds can extinguish the flame and also cause irregular air pressure resulting in the flame and heat coming out the back of Arc Lite. Use a wind break in open areas but keeping over 45cm/1ft 5" away from the device.

Do not pour water on to the cooking stone as this will likely crack it and could be dangerous because of oil and grease.

Do not wear loose flammable clothing or sleeves near Arc Lite.

Parts sealed by the manufacturer or the agent shall not be manipulated by the user.

Leave oven to cool for at least 30 minutes before attempting to move or touch the oven.

For replacement parts contact us at enquiries@gozney.com/inquiries@gozney.com

WARRANTY

Your Arc Lite comes with a 1 year warranty as standard, extended to a 5 year limited warranty if you register your product within 60 days of your purchase.

See www.Gozney.com/pages/warranty for full terms and conditions.

Head to us.gozney.com/pages/register product to register now, or scan the below QR code on your phone. If you don't have access to the internet, you can call us on +44 (0) 1425 204 999



EU DECLARATION OF CONFORMITY

Manufacturer's Name: Gozney Limited
Manufacturer's Address: Gozney Group Ltd, Bobbys, Third floor, The Square, 2-12 Commercial Rd, Bournemouth BH2 5LP.

Here with declare that this Product:
Arc Lite oven

Type(s):

Arc Lite : GOZ-3102

Trade name: Arc Lite

Is in conformity with the following EC directives:

- Gas Appliance Regulation (EU) 2016/426
- Gas Appliances (Enforcement) and Miscellaneous Amendments Regulations 2018 (UK Statutory Instrument 2018 No. 389)


and that the following harmonized standards have been applied:

EN 498:2012

END OF LIFE

At product's end of life, please dispose responsibly.

Product Overview - What's in the Box

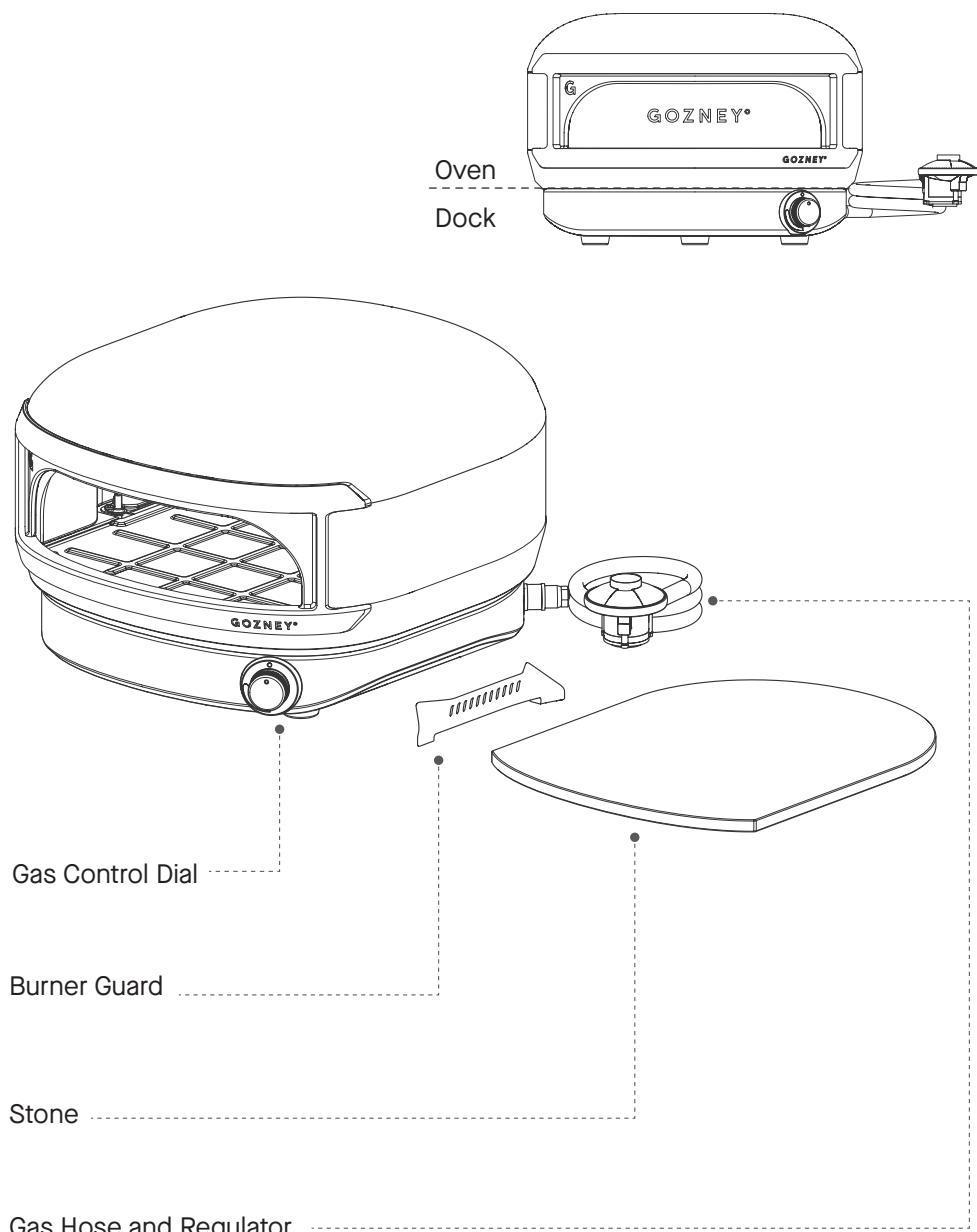

Gas Specification

Gozney Group Ltd, Bobbys, Third floor, The Square, 2-12 Commercial Rd, Bournemouth BH2 5LP

Appliance Name:	Arc Lite
Model/Type No.:	GOZ-3102
Trade name:	Gozney

DATA PLATE

Total nominal heat output for the gas burner		3.4 kW (252g/h) for I _{3P(30)} I _{3+(28-30/37)} I _{3P(37)} I _{3P(50)}			
Injector size	0.85mm	0.90mm			0.95mm
Gas Category	I _{3P(50)}	I _{3+(28-30/37)}	I _{3P(37)}	I _{3P(30)}	
Gas Type	Propane	Butane	Propane	Propane	Propane
Gas Pressure	50 mbar	28-30 mbar	37 mbar	37 mbar	30 mbar
Destination countries	AT, CH, DE, LU, NL, SK	BE, CH, CY, CZ, ES, FR, GR, HR, IE, IT, LV, LU, PL, PT, SK, SI	BE, FR, IT, IE, GB, GR, PT, ES, CZ, LT, SK, CH, SI, HR, NL, PL, TR	BE, FR, IT, IE, GB, GR, PT, ES, CZ, LT, SK, CH, SI, HR, NL, PL, TR	AL, BE, BG, CY, HR, DK, EE, FI, FR, HU, IS, IT, LT, LU, MT, MK, NL, NO, RO, SI, SE, TR

Read the instructions carefully before installing and using the appliance.

This appliance must be installed according to the regulations in force and only used in a well ventilated space.

Suitable for outdoor use only.

WARNING: Accessible parts may be very hot. Keep young children away.

Pin Code: 2575DQ45307



This section details the correct operation and install of a Gozney Arc Lite.

1

Operation & Installation

SAFETY CONSIDERATIONS

This appliance must be installed on a secure level base prior to use.

WARNING: This appliance will become very hot, do not move it during operation. Allow to cool for 30 minutes before moving or storing.

WARNING: Keep away from children and pets.

WARNING: This appliance is for outdoor use only.

The Arc Lite unit and the burner must always be well ventilated.

Do not move or leave Arc Lite unattended whilst in use.

Do not operate Arc Lite in strong winds. Wind can extinguish flame.

Do not burn wood in this oven.

Do not wear flammable loose garments or sleeves.

Do not cover oven mouth when there is an active flame, this will cause damage to the oven.

This oven is not intended to be installed in or on recreational vehicles.

Product may contain sharp edges! Please use caution.

NEVER cover slots, holes, or passages in the oven bottom or cover an entire dock with material such as aluminium foil. Doing so blocks air flow through the oven and may cause carbon monoxide poisoning. Aluminium foil linings may trap heat causing a fire hazard

In the event of rain, snow, hail, sleet, or other forms of precipitation while cooking with oil or grease, cover the cooking vessel immediately and turn off the appliance burners and gas supply. Do not attempt to move the appliance or cooking vessel. Do not place empty cooking vessel on the appliance while in operation.

WARNING: Contact your local municipality for any building codes applicable to the use, installation and operation of outdoor barbecue appliances.

FIRE

Most fires are caused by a build up of grease, or (if using gas) an improper gas connection. In the event of a fire ensure all people and pets are kept as far away as possible.

Use a fire extinguisher if possible, but if water is the only fire retardant available, thoroughly soak the area around the appliance. When spraying water on Arc Lite itself, do not use a strong jet of water, as this may cause splashing of burning grease, resulting in a further spreading of the fire.

When cooking with oil or grease, have a type BC or ABC fire extinguisher readily available. In the event of an oil or grease fire, do not attempt to extinguish with water. Immediately call the fire department. A Type BC or ABC fire extinguisher can, in some circumstances, contain the fire.

The installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, Storage and Handling of Liquefied Petroleum Gases, ANSI/NFPA 58; or Natural Gas and Propane Installation Code, CSA B149.1; Propane Storage and Handling, CSA B149.2

CARBON MONOXIDE

Carbon Monoxide is a highly poisonous gas which can be produced when the device isn't receiving enough ventilation.

We therefore recommend using gas fuels in a well ventilated area away from direct wind and to never cover the oven mouth when there is an open flame present.

It is difficult to know if your device is producing Carbon Monoxide as it is an odourless and colourless gas.

It can, however cause these symptoms when you are exposed to it:

- Tightness across the forehead
- Headache
- Weakness
- Dizziness
- Nausea
- Vomiting
- Coma, intermittent convulsions
- Depressed heart action, slowed respiration

If the exposure has been severe it may cause death.

Please follow local regulations and install a CO alarm if necessary.



This section details the set up of the oven and the accessories included with your Arc Lite.

2


Setup

Installing the Stones

Before using Arc Lite it is important that you install the stone (inside the separate cardboard box). To do this, slide the stone into the mouth until it touches the back of the core. Be careful not to hit the burner on the left.

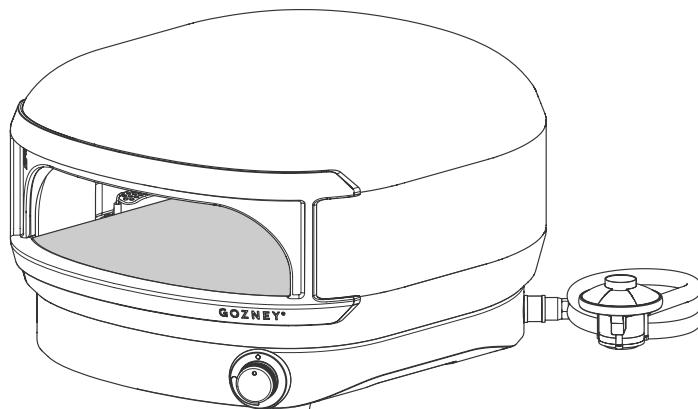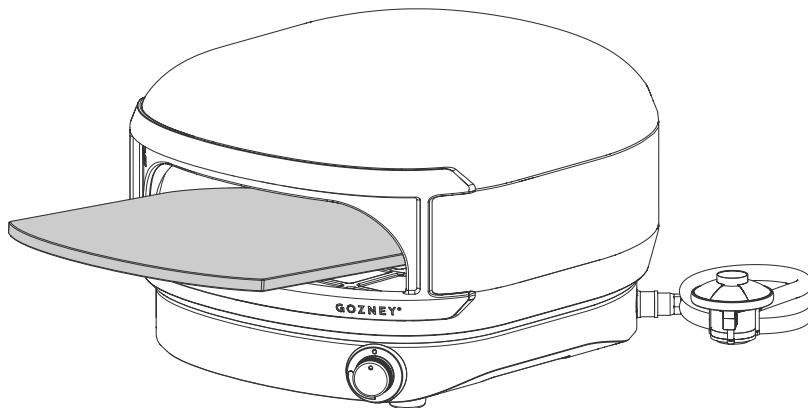

Installing the Burner Guard

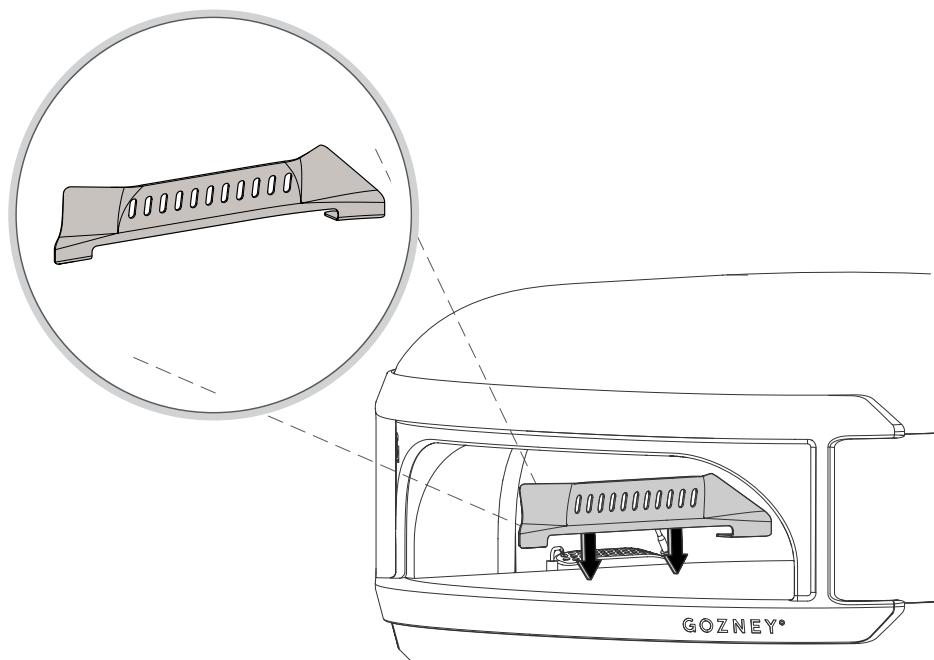

When fitting the burner guard ensure the stone is central. This may need adjusting accordingly.

Moving the Oven

Use the hand holds on the underside edges of the oven to carry it.

Do not move Arc Lite whilst in operation or when it is still hot.

Always allow at least 30 minutes to cool after use before attempting to move Arc Lite.



WARNING

Do not use the mouth of the oven as a lifting point.


Do not use the hose as a lifting point.

Remove anything loose and all transit packaging in the oven before moving.

Always plan the route you are going to take, remove any obstacles on your path and ensure the oven will fit through the intended route.

Ensure the area you are moving the oven to fits with the guidelines on the following page.

Be sure that you have the capability to safely move the oven and set it in place. Failure to do so could cause serious bodily injury.

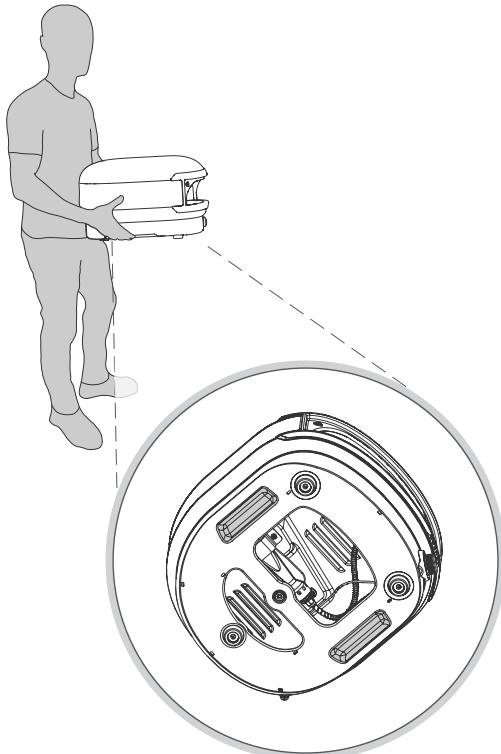

OVEN PLACEMENT

When deciding where to place Arc Lite, ensure the area is large enough to accommodate the oven with 50mm/2" around the base of the dock for air intake. It is important nothing is blocking this area as this will affect the performance of Arc Lite.





WARNING

When placing your oven it is important to maintain proper clearances from combustible construction. Ensure Arc Lite has 0.3m/1ft clearance (back and sides) and 1m/3ft 3" clearance (front) from any combustible construction.

Under no circumstances is the oven to be placed under or on top of any combustible structure.


Always keep the area around the oven clear of any combustible materials, gasoline and other flammable vapors and liquids.

ARC LITE

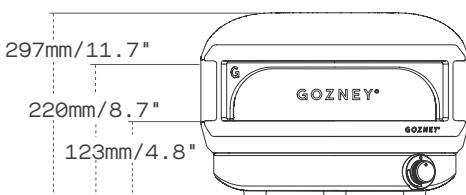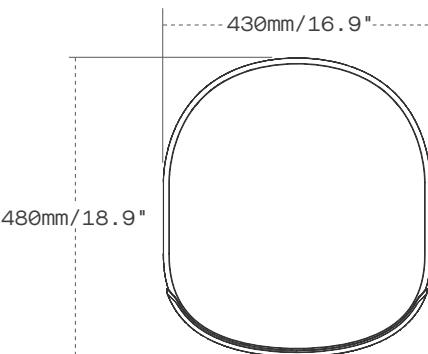

We recommend the height of the floor to be around the level of the bottom of the user's elbow (usually around 1.2m/3ft 11" from the ground).


Ensure the surface the oven is being placed on is completely level, stable and capable of easily holding the weight of the oven - 12kg/26.5lbs.

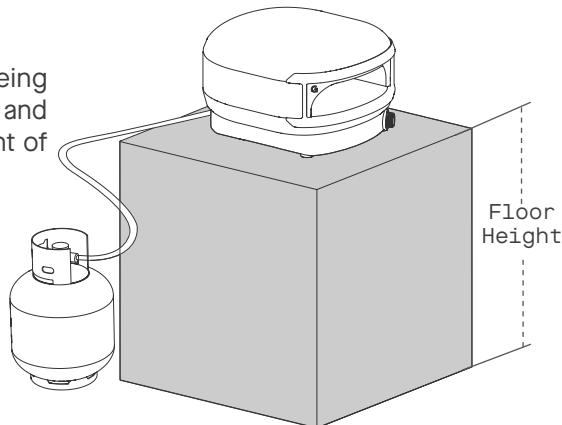

WARNING

Never operate the oven in high winds or if the wind is blowing into the oven mouth.

Wind should be taken into consideration when choosing a location. The oven should be orientated so that the mouth is facing away from the wind. Avoid using the oven in windy conditions, it is important to have wind breaks situated around the oven to stop the wind from blowing the flame down into the dock. If you see fire coming from the dock, turn the oven off from either the gas bottle or control dial. Never operate the oven in high winds.

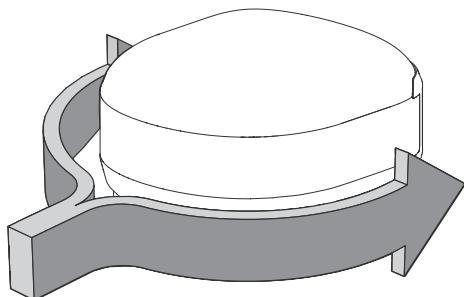

Your guide to burning gas.

3

Firing up Gas

Connecting to Gas

Check that the gas you are using is specified on the data plate page.

The gas cylinder used must have a safety collar to protect the valve assembly. Do not use a cylinder that is rusty, dented or has a damaged valve.

We recommend using a 5kg/11lb gas bottle as a minimum for optimum performance.

Connect the regulator to the gas canister, following the instructions for your regulator accordingly. Do not force the regulator as this could damage the gas bottle.

WARNING: If at any point you smell gas:


Shut off the gas from the cylinder, turn off the switch on Arc Lite and extinguish any open flames.

If odour continues, move away from Arc Lite and gas supply then contact your gas supplier or fire service.

Ensure that the LPG cylinder or regulator valve is closed.

The cylinder supply system shall be arranged for vapor withdrawal.

The burner ignition is capable of being accomplished by a paper book match. A lighting rod assembly for use with a paper book match should be used.

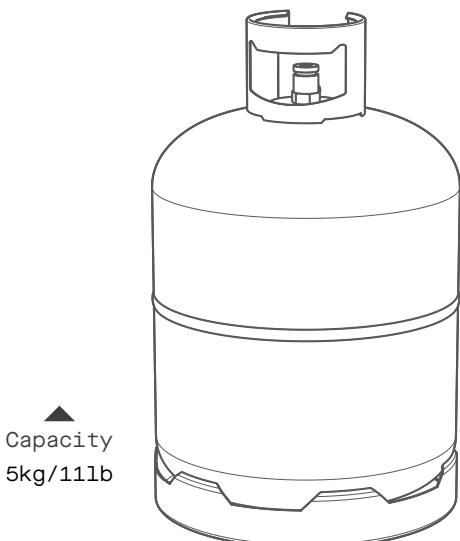

Gas Safety

Prior to use, check the oven, burner and venturi for blockages (e.g. food residue or insect nests - Wasps, Bees or Ants.) If an insect nest is found they can be dangerous and must be cleaned out thoroughly. Please refer to the cleaning and maintenance section for guidance.

Should the appliance extinguish for any reason, turn off the control dial and the cylinder gas valve. Wait 5 minutes before attempting to relight the appliance.

Some foods produce flammable fats and juices. Therefore the Arc Lite oven should be attended at all times whilst being used. Damage caused by fat and grease fires is not covered by warranty. If a grease or fat fire should occur, immediately turn off burner knob and the gas cylinder valve until the fire is out. Remove all food from the appliance.

A leak test must be carried out prior to using the appliance for the first time and whenever the gas cylinder is refilled or whenever the gas hose and regulator have been disconnected from the gas cylinder or appliance. For instructions on how to test for gas leaks see page 28.

Remove all packaging before attempting to light the gas burner.

Please take a moment to review all of the safety requirements before operating the appliance when using gas. If the appliance is not in use, the gas must be turned off at the supply cylinder.

CAUTION: Use only the gas pressure regulator supplied with this appliance or Gozney approved alternative. This regulator is set for an outlet pressure of 30 mbar (3.0 kPa)/37mbar (3.7 kPa)/ 50 mbar (5.0 kPa) depending on region.



Arc Lite must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ psi (3.5 kPa).



Do not disconnect any gas fittings while the appliance is operating.



Check all gas hose lines and connections for cuts, cracks and other damage before each use. If there is excessive abrasion or wear it must be replaced with a Gozney approved hose assembly before use.



Cylinders must be stored outdoors out of the reach of children and shall not be stored in a building, garage, or any other enclosed area.



Keep the fuel supply hose away from heated surfaces or direct sunlight.

- ⚠**
Do not use any additional flammable substance whilst operating with gas.
- ⚠**
Do not touch! Arc Lite can get extremely hot when in operation. Be sure to wear protective gloves when operating the oven. Young children should be kept away.
- ⚠**
Keep the cylinder outdoors in its upright position.
- ⚠**
Do not connect multiple gas canisters to Arc Lite or store a spare within the same vicinity.
- ⚠**
A regulator which complies with EN16129 /EN12864/ANSI Z21.18/CSA 6.3 or UL 144 must fit between the gas canister and the oven.
- ⚠**
Never use a naked flame to check for gas leaks.
- ⚠**
Maximum length of hose cannot exceed 1.5m/4ft 11". In Finland, hose length cannot exceed 1.2m/3ft 11".
- ⚠**
National requirements state how often to replace the hose. Please review this for your area.
- ⚠**
Make sure the flexible tube is not twisting when the appliance is in operation.
- ⚠**
Do not spray aerosols in the vicinity of the appliance while it is in operation.
- ⚠**
Do not use or store flammable materials in or near this appliance
- ⚠**
Do not place articles on or against this appliance. Do not modify this appliance.
- ⚠**
Do not use an adaptor at the cylinder connection.
- ⚠**
Never fill the cylinder beyond 80 percent full.
- ⚠**
Do not store a spare LPG cylinder under or near this appliance.
- ⚠**
If the information above is not followed exactly, a fire causing death or serious injury could occur.

THE GAS HOSE

The gas hose comes connected to the oven. Do not disconnect. This connection must be tested for leaks before using the oven.


Inspect the hose before each use of the appliance. If there is evidence of abrasion, wear, cuts, or leaks, the hose must be replaced prior to the appliance being put into operation. Any replacement hose assembly or pressure regulators shall be that specified by Gozney, for more details visit the Gozney website. www.gozney.com. Keep the gas hose away from any heated surface(s).

Be cautious of placement as poor placement increases the hazard of tripping over the hose and tipping the supply cylinder.





WARNING

Take care to ensure the regulator and hose can not swing freely when moving the oven

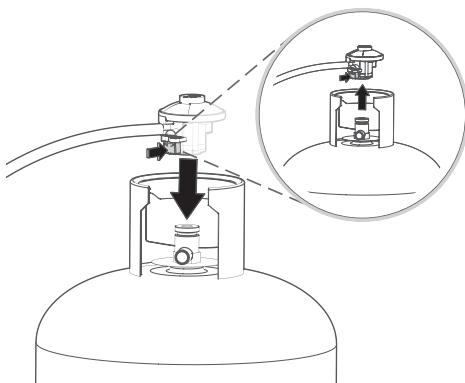

PUSH FIT REGULATOR


Make sure the lever is in the horizontal position so the button can be pressed. Pressing in the button, place the regulator onto the gas bottle. After releasing the button, turn the lever to a vertical position. This connection must be tested for leaks before using the oven.

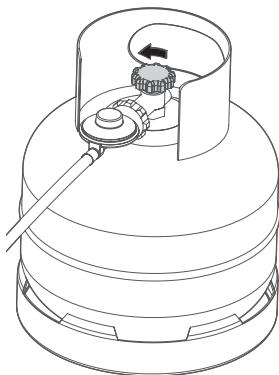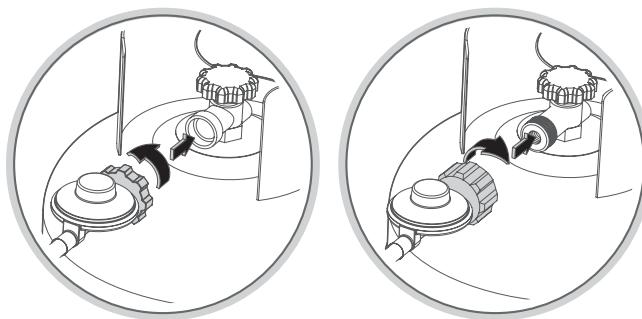

CLOCKWISE/ANTICLOCKWISE REGULATOR

Ensure the gas bottle is turned off. Align the regulator and the gas bottle threads and carefully begin to tighten ensuring the threads aren't crossed. Continue to tighten until a tight fit has been made. This connection must be tested for leaks before using the oven.

Testing for Leaks

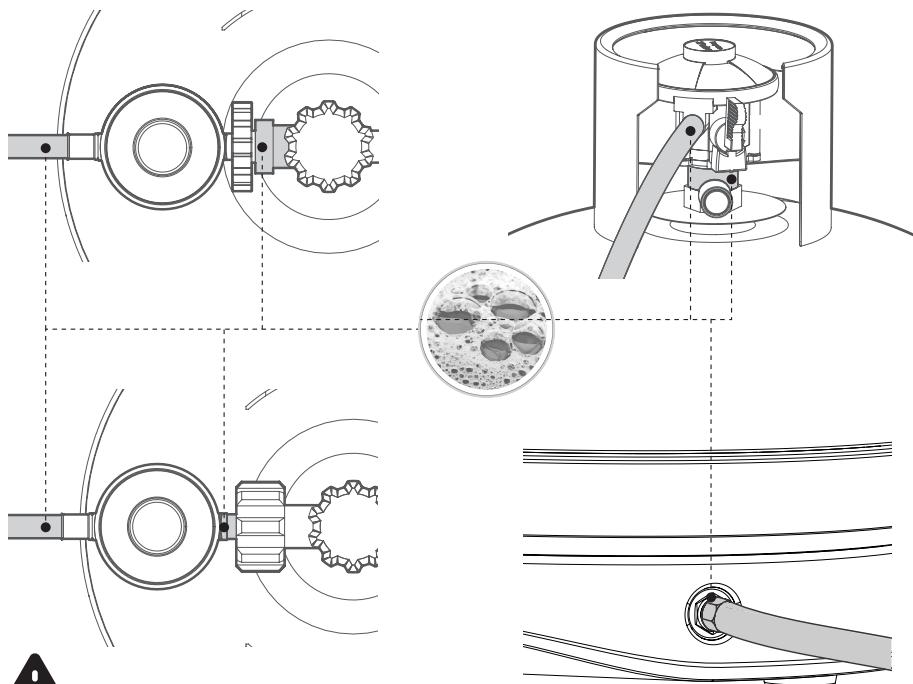

WARNING




You should always check for gas leaks every time you disconnect and reconnect a gas fitting. Never ignite burners when leak checking.

To test for gas leaks, apply a mixture of soapy water with a brush to the highlighted areas and any cracks along the hose. If a leak is present the solution will bubble.

If there is a leak at the hose to oven connection, remove and re-connect the Jubilee Clip and check for leaks by applying a soap-and-water solution to the highlighted areas with a brush. If a leak persists turn off the gas and DO NOT OPERATE THE OVEN.

If there is a leak at the valve connection, remove LPG cylinder. Do not operate oven. Use a different LP cylinder and recheck for leaks with the soap-and-water solution.

Ignition

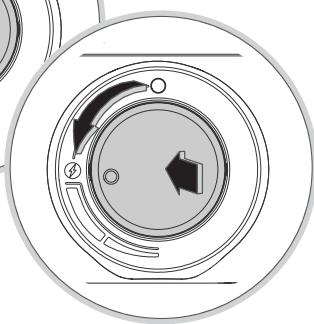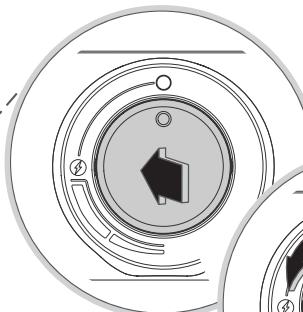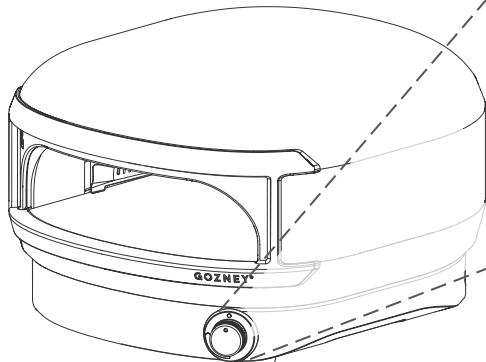

To light the gas burner: Position yourself to the side of the oven, press the control dial inwards and turn the dial to the 9 o'clock position until you hear a clicking sound and the burner ignites. This can take up to 10 seconds.

Hold the control dial in this position for up to 30 seconds to disengage the Flame Failure Device, then release. The burner should stay lit. Wait 3 minutes for any gas to disperse and then repeat this process if it does not.

The flame should be yellow/orange in colour and roll along the top of the oven.




WARNING

If ignition does not occur in 5 seconds, turn the burner control off, wait 5 minutes, and repeat the lighting process.



First Firing

Always begin a cook with preheating on the high flame for 20 minutes to bring your oven up to cooking temperature as quickly as possible.

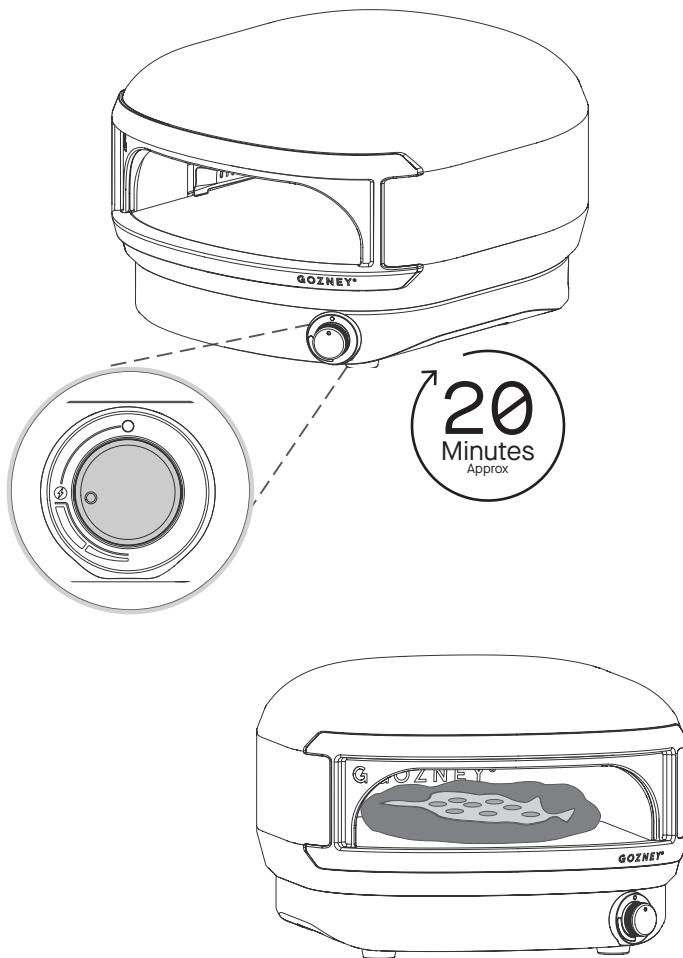

Flame Control

Arc Lite is equipped with an adjustable flame dial that allows you to control the heat level using the gas dial for different cooking styles. Understanding how to use the dial properly ensures the best results, whether you're making a quick Neapolitan pizza or a slower-cooked New York-style pie.

FLAME CONTROL ZONES

The dial is divided into two color-coded zones:


HIGH FLAME ZONE (RED)

Purpose: Use this setting to preheat the oven quickly or to cook pizzas at high heat

Ideal For:

Neapolitan-style pizzas (thin base, puffy crust, cooked in under 2 minutes) — the higher heat rapidly turns the moisture in the dough to steam creating a fast rising and puffy crust pizza.

Searing steaks or other foods that benefit from quick, intense heat.

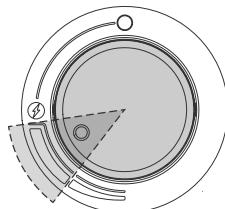


LOW FLAME ZONE (BLUE)

Purpose: Use this setting for lower, slower cooking. It maintains a steady heat to cook your pizza thoroughly without burning the toppings.

Ideal For:

New York-style pizzas (thicker base, longer cooking time for a crispy crust)

Deep dish pizzas such as Detroit and Chicago styles which require longer, more gentle heat to cook evenly.

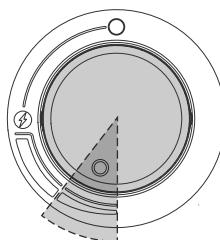


Tip: Using a Gozney Infrared Thermometer will allow you to accurately measure the temperature of the oven's stone and is recommended for more precise, repeatable results.

Troubleshooting Gas Burner


PROBLEM OBSERVED	POSSIBLE REASONS	SOLUTION
Flame looks too small	<ul style="list-style-type: none">Gas cylinder is near emptyGas cylinder is too smallAmbient temperature is below 0°C/32°FBlocked burner	<ul style="list-style-type: none">Try replacing the gas cylinder if it is empty.The cannister maybe too small. We recommend a 5kg canister as a minimum.If the ambient temperature is below 0°C it is to be expected that a loss of power from the gas canister will occur.The burner could be blocked, please refer to cleaning instructions available in this manual.
Failure to ignite	<ul style="list-style-type: none">Blocked burnerGas canister is empty	<ul style="list-style-type: none">If firing for the first time or replacing a gas bottle the burner can take up to 30 seconds for the gas to flow through the system.
Noisy Flame	<ul style="list-style-type: none">Incorrect ignitionBlocked Burner	<ul style="list-style-type: none">If the burner is making a loud grumbling sound first turn the burner down to low flame and then back to high. If the sound continues turn the burner off for 5 minutes and retry igniting it. If the problem persists still review the cleaning and maintenance instructions to remove debris in the burner..

If the problem persists after trying the following solutions please contact Gozney for further support.


Disconnecting Gas

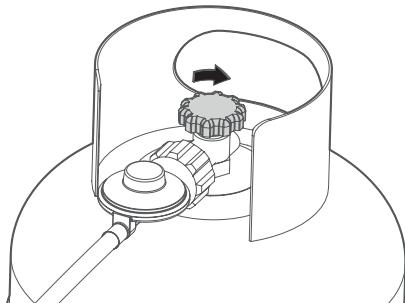


3
Minutes

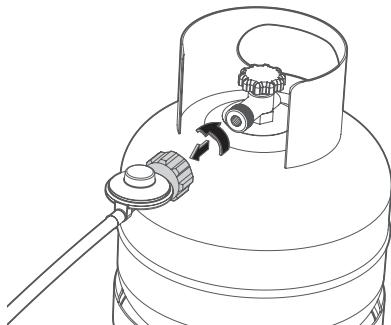

CLOCKWISE/ANTICLOCKWISE REGULATOR


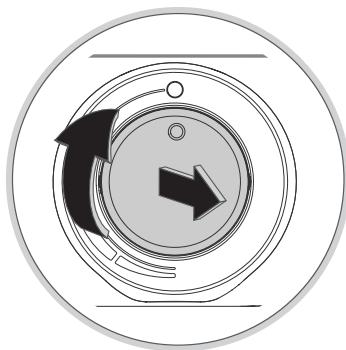


After cooking, be sure to turn off the gas from the gas canister first before turning off Arc Lite. This will allow any gas left in the burner or pipe to be used up safely. Three minutes after turning the gas off it will be safe to remove the regulator and turn the control dial back to the off position.

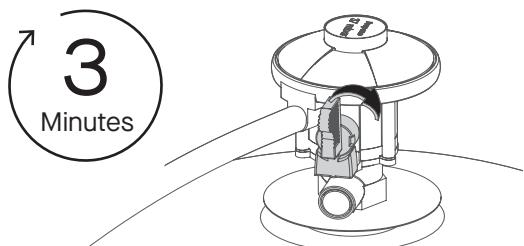

PUSH FIT REGULATOR

After cooking, be sure to turn off the gas from the gas canister first before turning off Arc Lite. This will allow any gas left in the burner or pipe to be used up safely. Three minutes after turning the gas off it will be safe to remove the regulator and turn the control dial back to the off position.

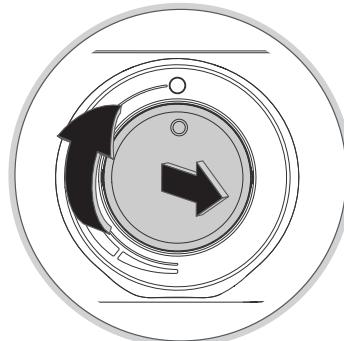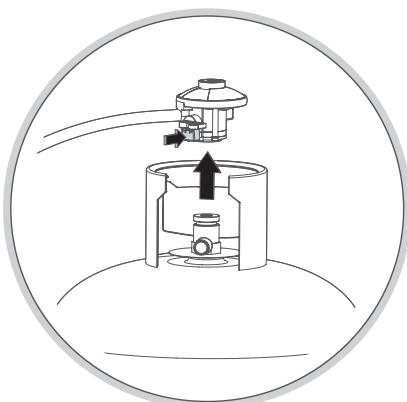

Your guide to general maintenance.


4

General Maintenance

Maintenance


CLEANING THE VENTURI

If your burner's flame is overly yellow or making more noise than usual you may have debris blocking the venturi. When the oven is turned off, DISCONNECT IT FROM THE GAS and let it cool. Remove the stone and burner guard from the oven (reverse of installing them on pages 16 and 17). Make sure Arc Lite is on a soft surface that won't cause scratches before gently rolling it onto its side. Use a vacuum cleaner with a long plastic nose to remove any debris. It's good practice to check the inside of the dock for debris regularly.

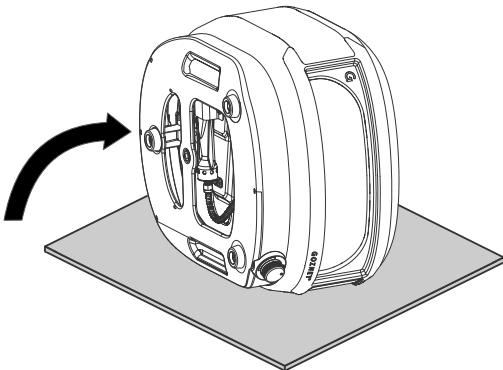

WARNING

Take care not to damage any of the wiring looms when cleaning internals.

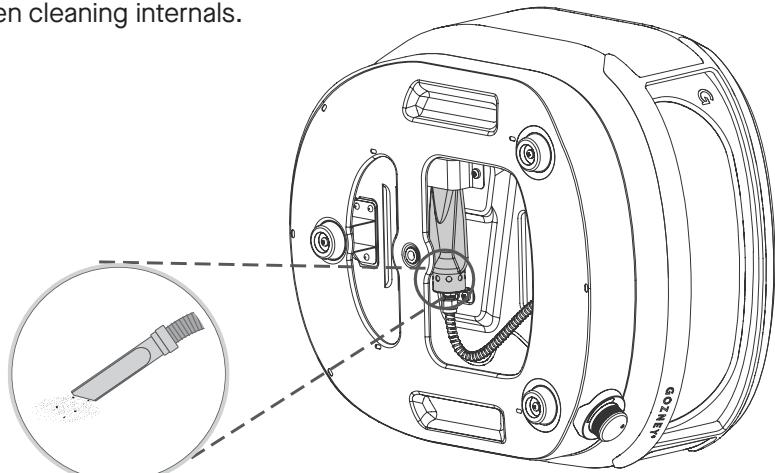

Venturi




Cleaning the Oven

INTERNAL

The best way to clean the inside of Arc Lite is to burn off any food debris or soot that is left behind. When the oven is over 343°C/650°F it will start self cleaning and any burnt on food will burn off after a period of three hours.

If there is any soot or debris left, wait for the oven to cool down and use a soft brush to dislodge, being careful not to apply too much pressure and damage the oven. Use a vacuum cleaner with a plastic attachment to remove the loose debris from the oven.

Carbon deposits may form over the internal roof of the oven core. We recommend using a soft brush in conjunction with a vacuum cleaner to remove any carbon, taking care to remove any carbon that may fall on to the stone.

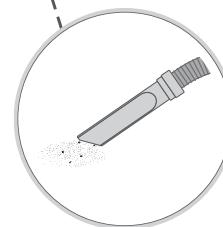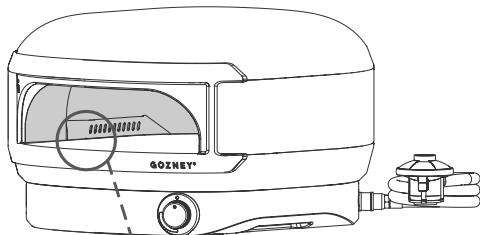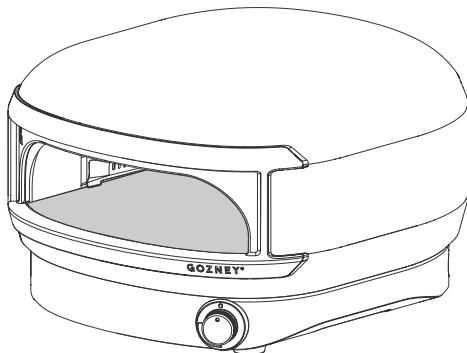

EXTERNAL


For the exterior of Arc Lite ensure the oven is cool and use a non caustic bleach free cleaning spray on the dirty areas. Clean the area with warm soapy water and a sponge or non abrasive dish cloth and then wipe clean with paper towels.

Avoid spraying directly onto the control dial.

Do not use abrasive cleaning products or abrasive sponges, cloths etc.

When the oven isn't in use it should be kept under cover away from rain. If you are placing a cover directly on Arc Lite, ensure it's completely cooled down before covering.

When using the oven again after a long period of disuse, we recommend firing the oven as if it is a first firing.

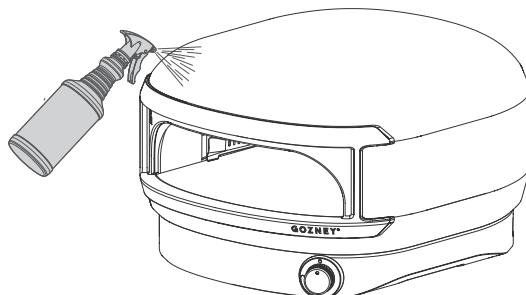

GOZNEY°